


How to Install Clear Car Decals

The following instructions are to help you have a successful, timely install of your custom car window decal. The installation is a simple process and requires no professional help. We recommend installing your decal in an environment with a temperature above 40 degrees Fahrenheit.

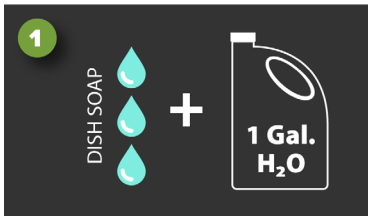

Clear car decals use a wet installation method, so you will need to begin by creating an application solution (approximately 3 drops of dishwashing liquid to 1 gallon of warm water) which you will eventually apply to the desired surface and the adhesive side of the decal.



Clean the desired surface (either the window or body of your vehicle) with soap and water, removing all dust and dirt particles. If dust and dirt is not fully removed from the surface this may cause small air bubbles in your decal and prevent it from adhering properly. After cleaning the surface, either allow time for the surface to air dry or remove excess water with a rubber squeegee.



Thoroughly soak the desired surface with the application solution created in Step 1.



Begin to remove the back liner. As you are removing the back liner, generously apply application solution to the back of the decal.



Take the decal and place it onto your desired surface with the wet adhesive side against the application surface. You may lift the decal to remove large bubbles or wrinkles when applying.

How to Install Clear Car Decals



The application solution on both the application surface and the adhesive side of the decal will allow you to slide the decal into the correct position.



Use a squeegee* to remove air bubbles and excess application solution from underneath the decal. When using the squeegee, start in the center of the decal and squeegee in a straight line to the right and left side of the decal. Continue this process until you have ran the squeegee over the entire decal. Feel free to press hard when using the squeegee to ensure the removal of excess water. You may place the back liner on top of your decal during this process to avoid damage to the decal. Once squeegeed, you will not be able to reposition your decal.

*Available as an additional purchase.



Use a paper towel to wipe excess water away from the edges of the decal. Allow up to 24 hours for the decal to dry before driving.